



BRASS GAUGE CHART

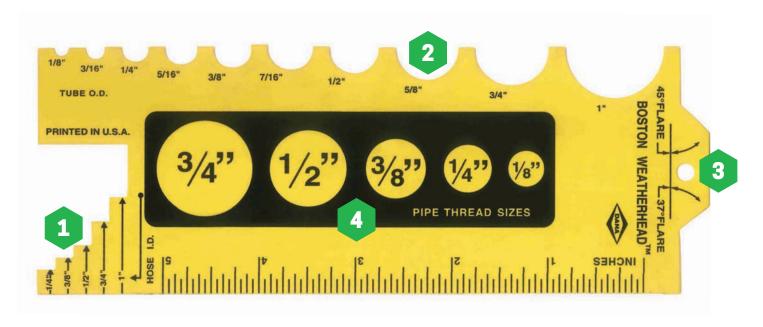

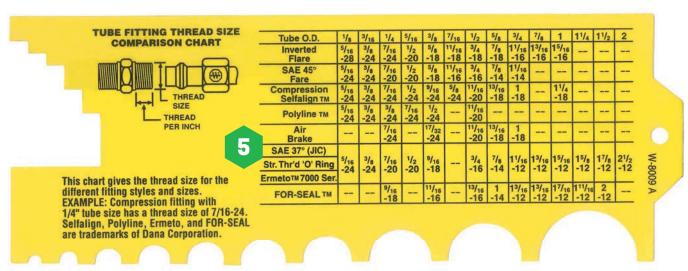

Pipe thread can be measured, outside thread to outside thread, minus 1/4".

- 1. "Steps" allow for measuring inside diameter of tube.
- 2. "Half-moons" used for measuring outside diameter of tube.
- 3. Angles on tab are used for finding 37° or 45° of flare.
- **4.** "Black Box" is for measuring pip thread size.
- **5.** Used to find tube fitting thread per inch.

NOTE:

Steel fittings are 37°. Exception: Some Residential/Commercial A/C fittings are 37° brass.

Patlin has made a concerted effort to provide accurate information, however Patlin assumes no responsibility for the accuracy of the information.





